


This is our installation guide for the following products below.


These bracket installations should be done **after tiling.**

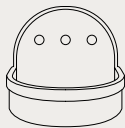


Betty




Herbert

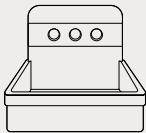


Herbert Two Tone




Loop 01




Loop 02



Shelf 01



Shelf 02



Shelf 03

Wall mount basin kit

**Your selected
concrete basin**
(design varies per basin)

**Mounting
Bolts**



Do not place tools, taps and mixers inside or near the basin at any time.

Damage inflicted by doing so is not covered by our warranty.

Glue


**Assorted
Horseshoe
packers**

**Spirit
level**

**Wall mount
bracket**
(design varies per basin)


01

Use packer to level bracket if required

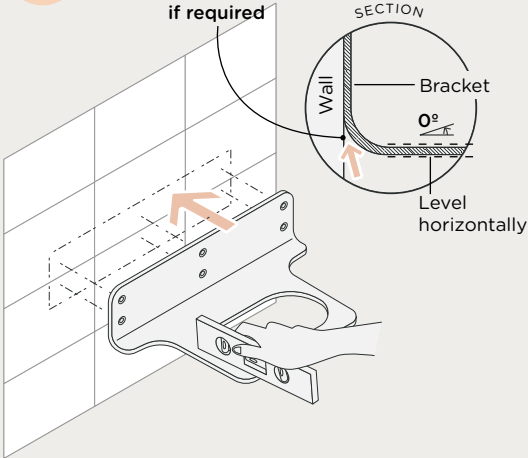


Mount bracket after tiling, ensuring bracket is placed at level height.

02

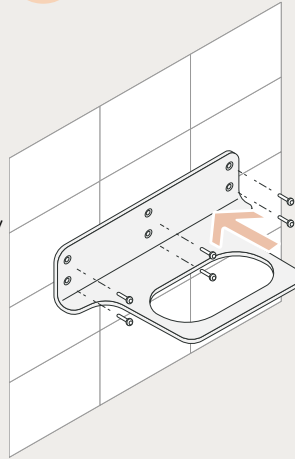


Bolt bracket to wall.

03

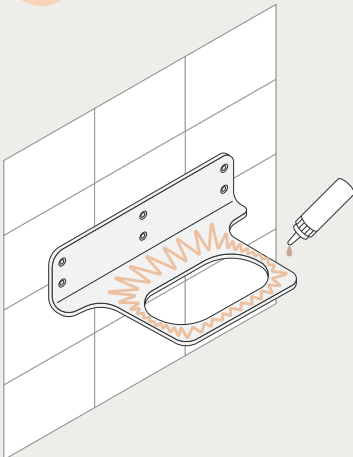


Apply glue provided to the mount bracket.

04

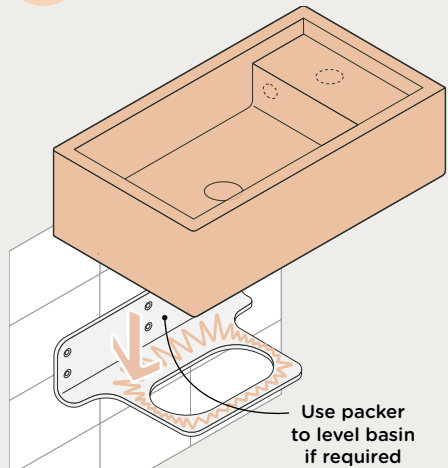


Lower basin onto mount bracket, ensuring basin is centrally placed.

05

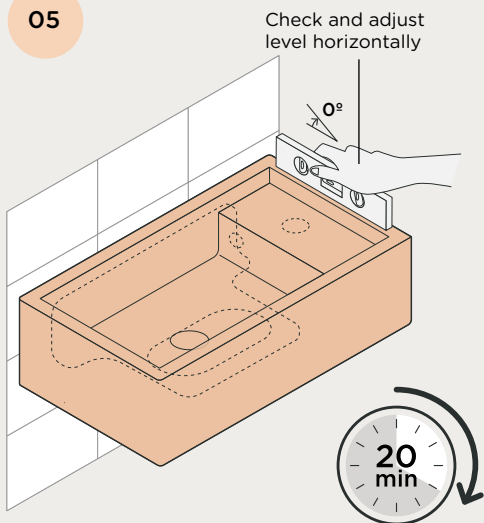


Working time for adhesion dry to touch: 20 mins.

06

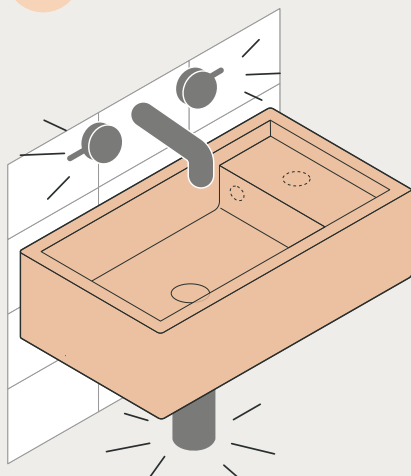

Carefully fit plumbing fixtures while glue dries.

07

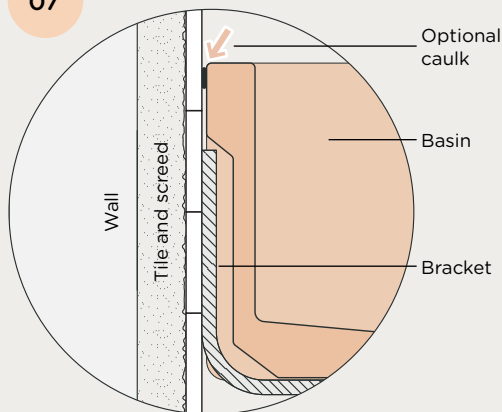

Depending on wall finish, caulking to close out small gaps between the basin is optional. Please consider a complementary caulk colour for your basin.

Got a question? Drop us a line, we're here to help!

info@noodco.com.au

noodco.com.au